


# COCKPITBLENDE

Cockpit fairing | Carénage de cockpit | Revestimiento del habitáculo | Carenatura cockpit

Art.-Nr: 21052-002

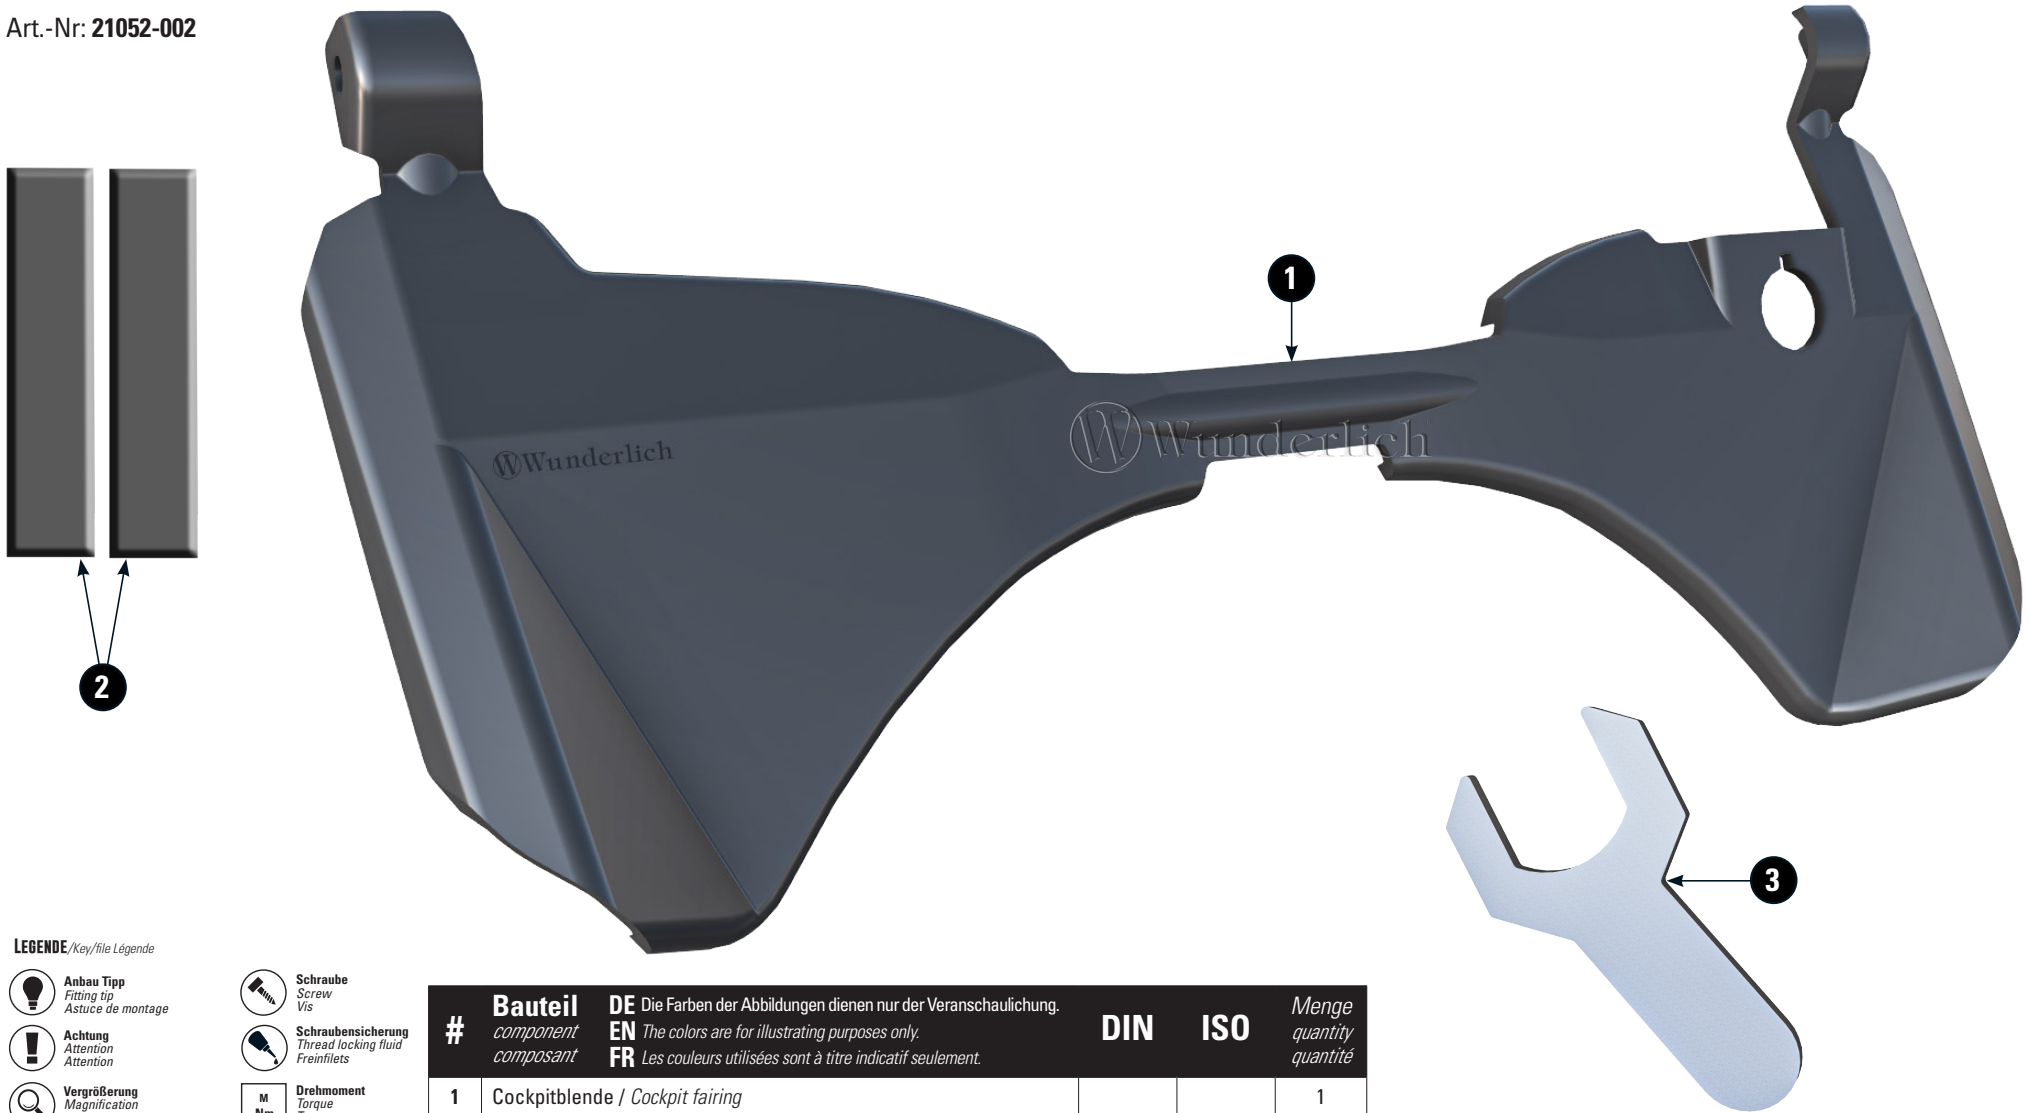

## LEGENDE / Key / file Légende

**Anbau Tipp**  
Fitting tip  
Astuce de montage

**Achtung**  
Attention  
Attention

**Vergrößerung**  
Magnification  
Grossissement

**Montagepaste**  
Fitting lubricant  
Lubrifiant de montage

**Schraube**  
Screw  
Vis


**Schraubensicherung**  
Thread locking fluid  
Freiniflets

**Drehmoment**  
Torque  
Torque

**Reiniger**  
Cleaner  
Nettoyant

#	Bauteil component composant	DE Die Farben der Abbildungen dienen nur der Veranschaulichung. EN The colors are for illustrating purposes only. FR Les couleurs utilisées sont à titre indicatif seulement.	DIN	ISO	Menge quantity quantité
1	Cockpitblende / Cockpit fairing				1
2	Doppelseitiges Klebeband / double-sided tape 12cm				2
3	Schraubenschlüssel / wrench				1

1

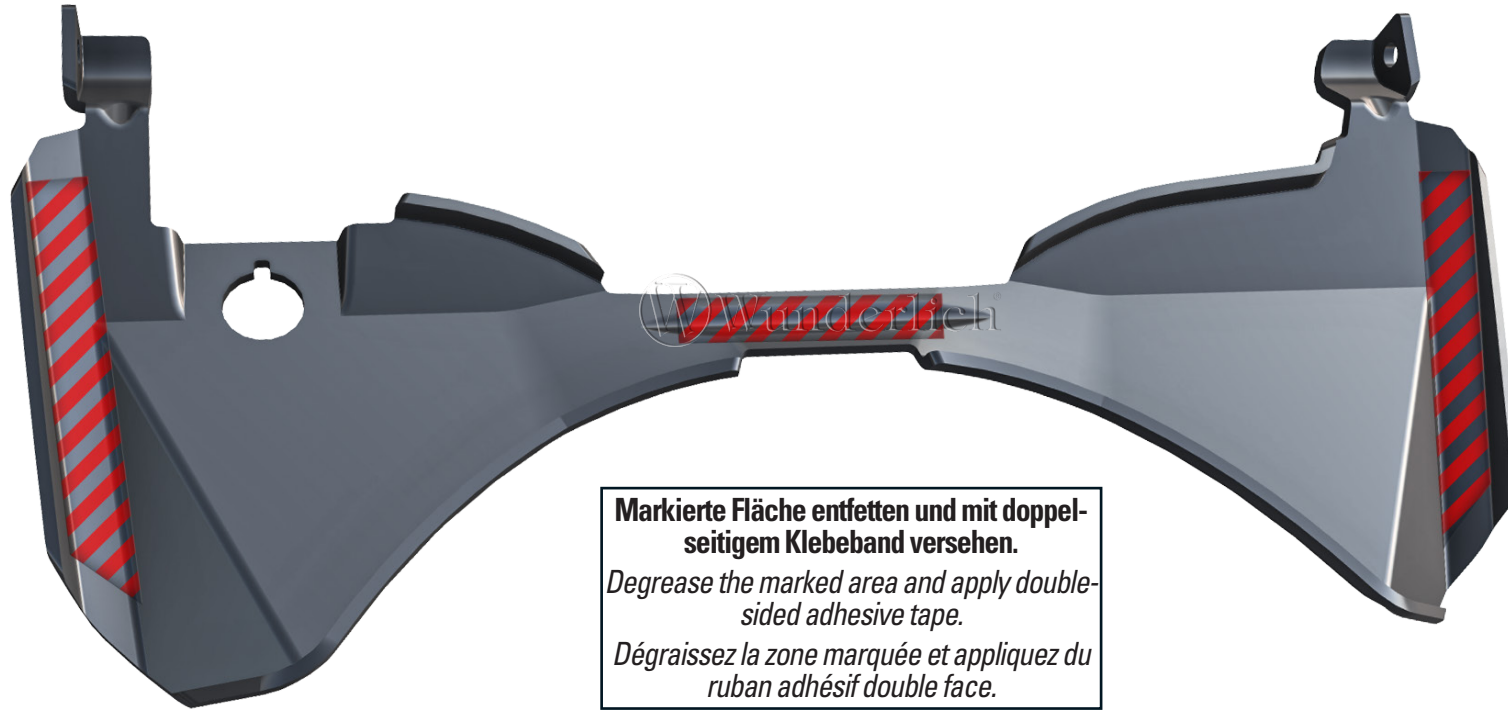

**Markierte Fläche entfetten und mit doppel-seitigem Klebeband versehen.**  
*Degrease the marked area and apply double-sided adhesive tape.*  
*Dégraissez la zone marquée et appliquez du ruban adhésif double face.*

2



3



