


# ORIG. ZUSATZSCHEINWERFER

original auxiliary light

20381-00

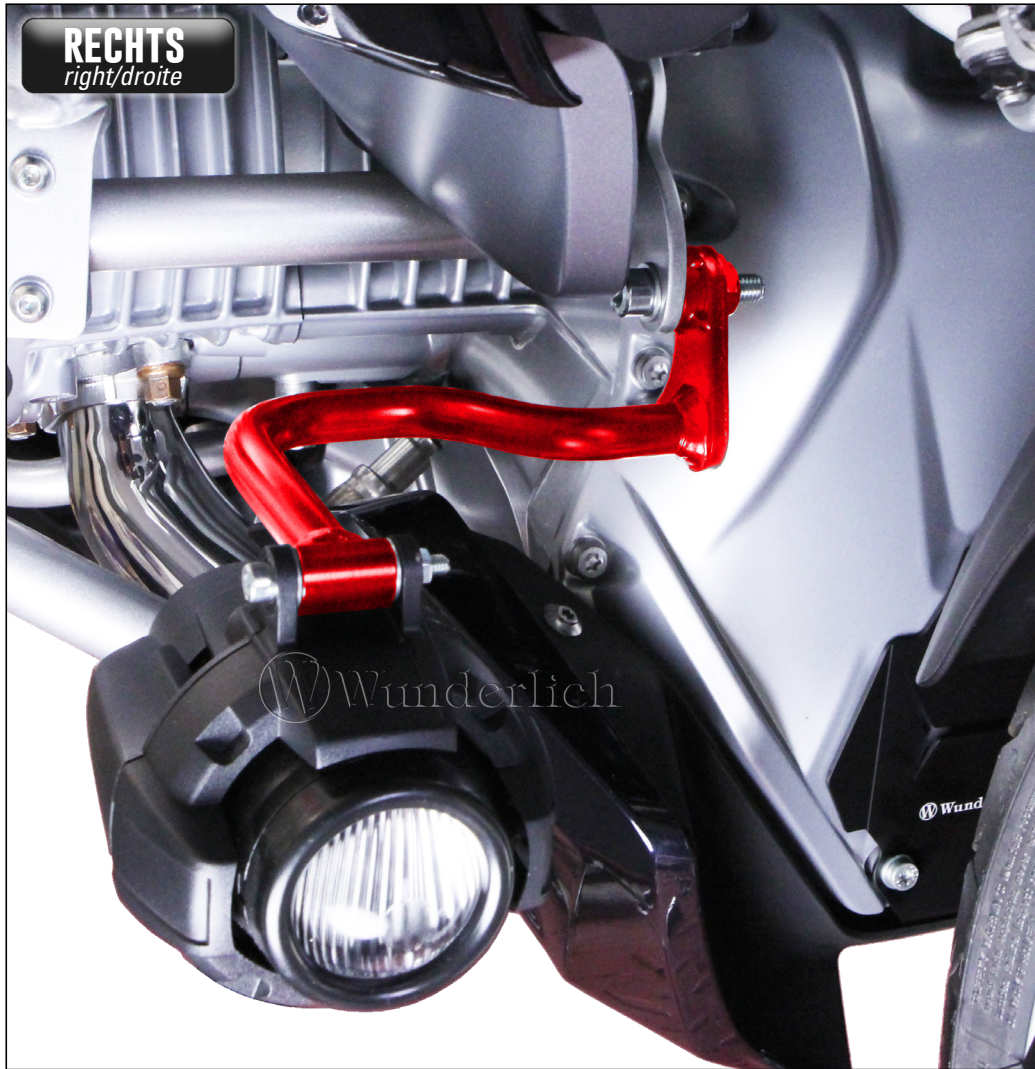

**Vorab den orig. Halter der Zusatzscheinwerfer demontieren und an den Schutzbügel montieren. Gegebenenfalls Kabelbinder der Kabelführung lösen!**

*First, remove the original bracket for the auxiliary headlights and fit it to the protection bar. If necessary, loosen cable ties of the cable guide!*

*Tout d'abord, retirez le support d'origine des phares auxiliaires et montez-le sur la barre de protection. Si nécessaire, desserrer les colliers de serrage du guide-câble !*




# ORIG. ZUSATZSCHEINWERFER

original auxiliary light

20380-XXX

LINKS  
left/liens

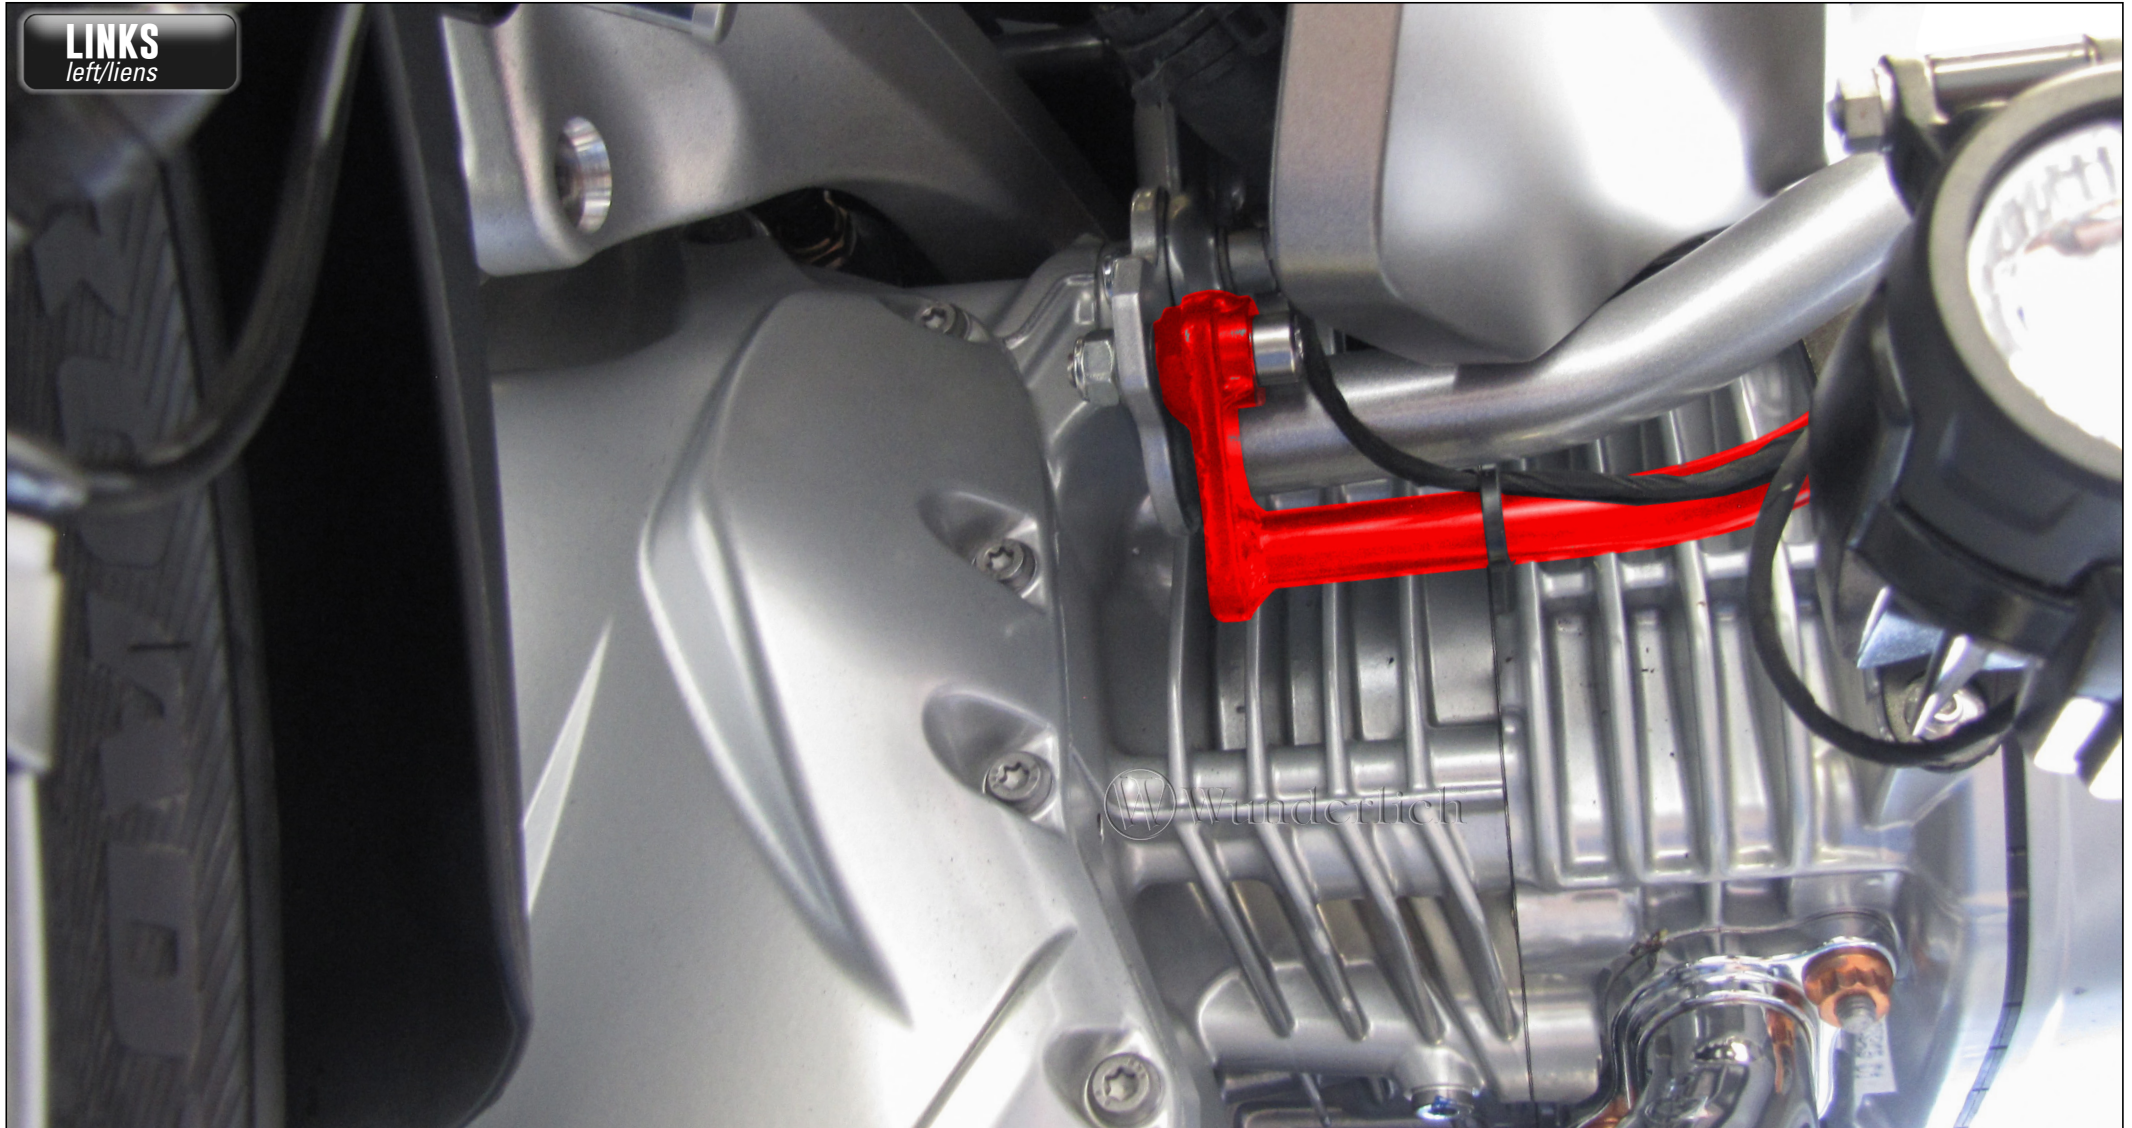

**Gegebenenfalls Kabel mit Kabelbinder fixieren!**  
*If necessary, secure the cable with cable ties!*  
*Si nécessaire, fixez le câble à l'aide de colliers de serrage !*

